

Hinged Vented Server Rack Blanking Panel

RKPNLHV2U

RKPNLHV4U

RKPNLHV6U

DE: Bedienungsanleitung - de.startech.com

FR: Guide de l'utilisateur - fr.startech.com

ES: Guía del usuario - es.startech.com

IT: Guida per l'uso - it.startech.com

NL: Gebruiksaanwijzing - nl.startech.com

PT: Guia do usuário - pt.startech.com

Packaging Contents

RKPNLHV2U

- 1 x 2U Hinged Vented Rack Blanking Panel
- 2 x 5/8" #10-32 UNF Screws
- 2 x #10-32 UNF Cage Nuts

RKPNLHV4U

- 1 x 4U Hinged Vented Rack Blanking Panel
- 2 x 5/8" #10-32 UNF Screws
- 2 x #10-32 UNF Cage Nuts

RKPNLHV6U

- 1 x 6U Hinged Vented Rack Blanking Panel
- 4 x 5/8" #10-32 UNF Screws
- 4 x #10-32 UNF cage nuts


Product Overview

RKPNLHVxU



Installation

1. Determine the 2U, 4U, or 6U space in your rack where the Blanking Panel will be mounted and on which side that you would like the hinge to be on.
2. Insert the provided #10-32 UNF Cage Nuts into either the left or the right post of your rack.
3. Align the Blanking Panel with the installed cage nuts and secure into place using the provided 5/8" #10-32 UNF Screws.
4. To open the panel, slide the latch inward and pull the panel toward you.

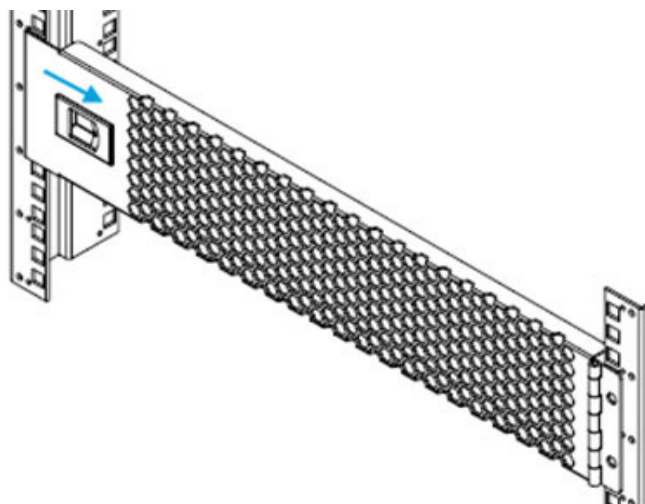

Specifications

RKPNLHV2U

U Height	2U
Frame Type	Steel
Mounting Options	Front Mount
External Dimensions (WxDxH)	18.98 x 0.59 x 3.47 in (482 x 15 x 88.1 mm)
Product Weight	0.75 lb (340 g)

*actual product may vary from photos

RKPNLHV4U

U Height	4U
Frame Type	Steel
Mounting Options	Front Mount
External Dimensions (WxDxH)	18.98 x 0.59 x 69.7 in (482 x 15 x 177 mm)
Product Weight	1.23 lb (560 g)

RKPNLHV6U

U Height	6U
Frame Type	Steel
Mounting Options	Front Mount
External Dimensions (WxDxH)	18.98 x 0.59 x 10.47 in (482 x 15 x 265.9)
Product Weight	2.38 lb (1080 g)

Use of Trademarks, Registered Trademarks, and other Protected Names and Symbols

This manual may make reference to trademarks, registered trademarks, and other protected names and/or symbols of third-party companies not related in any way to StarTech.com. Where they occur these references are for illustrative purposes only and do not represent an endorsement of a product or service by StarTech.com, or an endorsement of the product(s) to which this manual applies by the third-party company in question. Regardless of any direct acknowledgement elsewhere in the body of this document, StarTech.com hereby acknowledges that all trademarks, registered trademarks, service marks, and other protected names and/or symbols contained in this manual and related documents are the property of their respective holders.

Technical Support

StarTech.com's lifetime technical support is an integral part of our commitment to provide industry-leading solutions. If you ever need help with your product, visit www.startech.com/support and access our comprehensive selection of online tools, documentation, and downloads.

For the latest drivers/software, please visit www.startech.com/downloads

Warranty Information

This product is backed by a two-year warranty.

In addition, StarTech.com warrants its products against defects in materials and workmanship for the periods noted, following the initial date of purchase. During this period, the products may be returned for repair, or replacement with equivalent products at our discretion. The warranty covers parts and labor costs only. StarTech.com does not warrant its products from defects or damages arising from misuse, abuse, alteration, or normal wear and tear.

Limitation of Liability

In no event shall the liability of StarTech.com Ltd. and StarTech.com USA LLP (or their officers, directors, employees or agents) for any damages (whether direct or indirect, special, punitive, incidental, consequential, or otherwise), loss of profits, loss of business, or any pecuniary loss, arising out of or related to the use of the product exceed the actual price paid for the product. Some states do not allow the exclusion or limitation of incidental or consequential damages. If such laws apply, the limitations or exclusions contained in this statement may not apply to you.